

ASSEMBLY INSTRUCTIONS




MODEL W413.1 4 SEASON HIKER 7'8" X 4'8"

IMPORTANT: WE ADVISE YOU TO ASSEMBLE THE TENT ONCE BEFORE GOING CAMPING TO BECOME FAMILIAR WITH THE ASSEMBLY OF THE TENT. NOTE: PLEASE LOOK AT THE REPLACEMENT PARTS DIAGRAM TO SEE HOW YOUR FRAME IS ASSEMBLED.

TO PROLONG THE LIFE OF THE TENT FLOOR, SELECT A LEVEL, CLEAN AREA FOR THE CAMPSITE. TO PREVENT DAMAGE TO THE ZIPPER, UNZIP THE DOORS TO ALLOW AIR TO ENTER THE TENT.


TO IMPROVE THE WEATHER RESISTANCE OF YOUR TENT, IT IS ADVISABLE TO USE SEAM SEALER TO COAT ALL EXPOSED SEAMS. YOU SHOULD APPLY ONLY TO THE INSIDE SEAMS OF THE TENT AND UNDERSIDE OF THE TENT FLY. IF APPLIED TO THE OUTSIDE OF SEAMS, DISCOLORATION OF YOUR TENT MAY OCCUR. SEAM SEALER IS AVAILABLE IN THE CAMPING SECTION OF ANY LOCAL SPORTING GOODS STORE.

STEP 1: Spread tent out flat, floor side down.

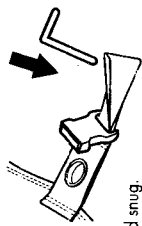


Step 2: Stake the tent to the ground by inserting metal tent stakes through the stake loops at the 4 corners of the tent. Hammer stakes into the ground at a 45° angle to the tent, making sure the tent floor is pulled out even and snug.

STEP 3: Extend the fiberglass frame poles by pulling out each section and placing it into the metal connectors. You will have three fiberglass poles. (Refer to the frame drawing on the opposite side of these assembly instructions). The two longest orange poles with metal tip ends (A) are the main tent poles. The shorter yellow pole is the ridge pole.

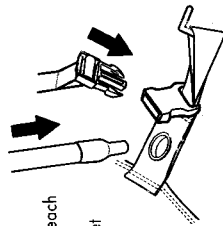


STEP 4: Lay the two main poles lengthwise across the top at each side the tent. Insert one pole end into the grommet at the side corner of the tent. Clip the plastic hook just above the grommet to the pole. Move to the other end of the tent and gently flex the pole into an arch and place the pole end into the grommet. Clip the plastic hooks attached to the tent walls to the tent pole. Repeat for the second main pole on the other side of the tent.

STEP 5: Place one end of the yellow ridge pole into the plastic cup just above the door. Go to the other side of the tent and insert the pole into the corresponding cup on the other side of the tent. Clip the plastic hook at the middle of the tent to center of the pole.

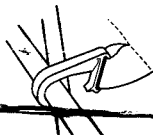


STEP 6: Locate the larger hooks where the main and ridge poles cross. Place the hook over both poles locking them together. Repeat on the other side of the tent.

Tent should appear as shown.

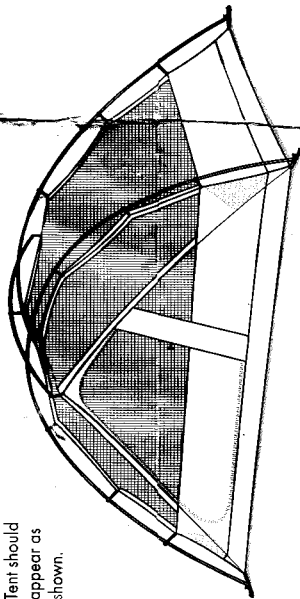


STEP 7: Unfold the fly and place it over the tent, making certain the vestibule zippers are placed over the doors. The rain fly is symmetrical so you can place the vestibule zippers over either door. Fasten the buckles on the fly to the corresponding buckles at the base of the tent. Adjust the webbing at the buckles to make fly taut.

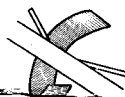


STEP 8: Fasten the Velcro fasteners sewn to the underside of the fly to the tent poles.

STEP 9: Stake down the front of the 2 vestibules by inserting a stake through the webbing loops at each side of the tent. Hammer the stakes into the ground at a 45° angle, by using a hammer or mallet. Make sure to pull tent vestibules out even and taut.

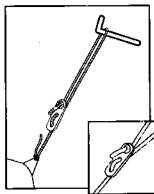

STEP 10: There are guy ropes located on the fly of the tent. Extend the guy ropes and make a loop at opposite end of rope by using the slider (as shown) and place loop over a tent stake. Adjust the slider to make the guy ropes tight and stake to the ground. Steel tent stakes have been included for this.

Assembled tent should appear as shown.

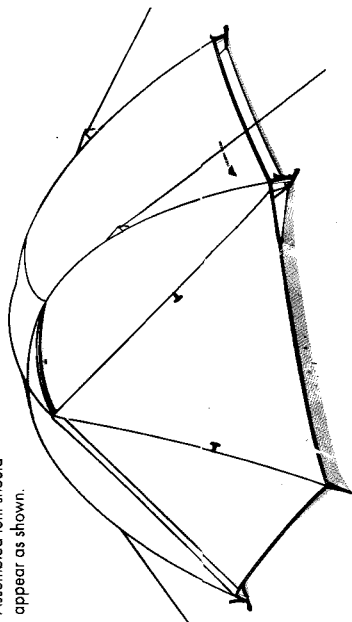

NOTE: To take down tent, follow steps above in the reverse order. Be sure to leave door unzipped. Place stakes into stake bag and poles into pole bag, which are provided. The tent should be folded into equal parts toward the center of the tent to distribute the bulk. Fold fly and lay on top of tent. Start a small tight roll, the width of the carry bag, with the pole bag placed at the end opposite the door. Roll tent toward door to allow air to escape. Once rolled, tie a string or rope around tent to hold into place. Place tent, frame and stake into carry bag. **MAKE SURE TENT IS CLEAN AND DRY BEFORE STORING.**